

Heated Rear Window Wiring Kit

IF YOU ARE IN ANY DOUBT ABOUT YOUR ABILITY TO INSTALL THIS KIT SAFELY, CONTACT A PROFESSIONAL AUTO ELECTRICIAN. INCORRECT CONNECTIONS MAY DAMAGE THE KIT AND EXISTING EQUIPMENT, HIGH CURRENTS CAN EVEN CAUSE A FIRE IN YOUR ENGINE COMPARTMENT.

1. Disconnect the battery earth terminal.
2. Mount the relay holder in a suitable position close to the battery.
3. Connect the cables as shown in the attached diagram.
4. Two earth cables are supplied – the shorter one should be used to connect to the heated window, and the longer one for the switch. The earth terminals should be cleanly and securely connected to the body or chassis.
5. The separate red cable provided is used to supply power to the switch and should be connected to a suitable power source.
6. When you have checked all of your connections, re-connect the battery earth terminal.

