

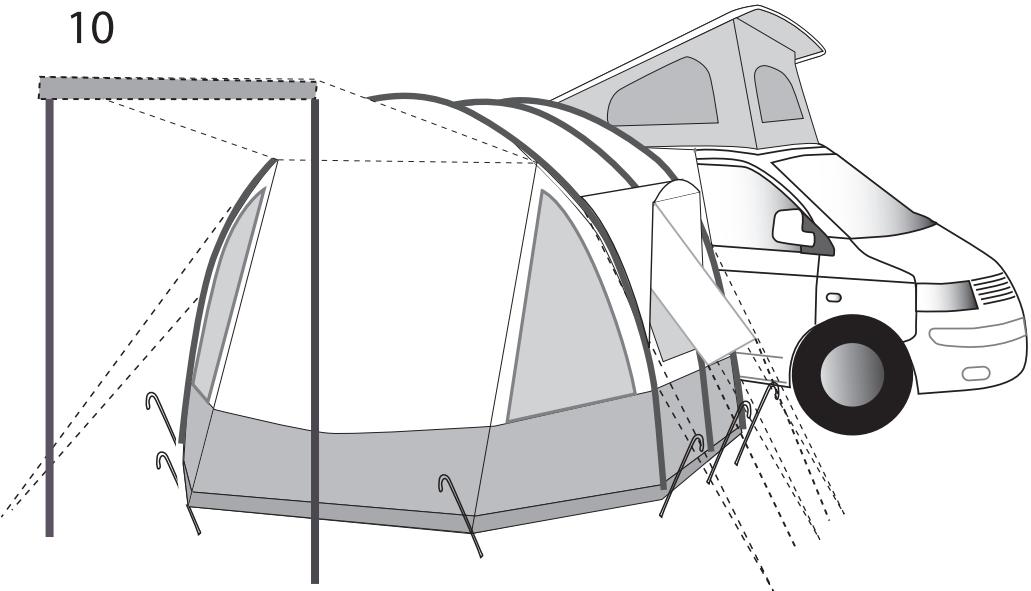


# Tour Action 4

900277 + 900278

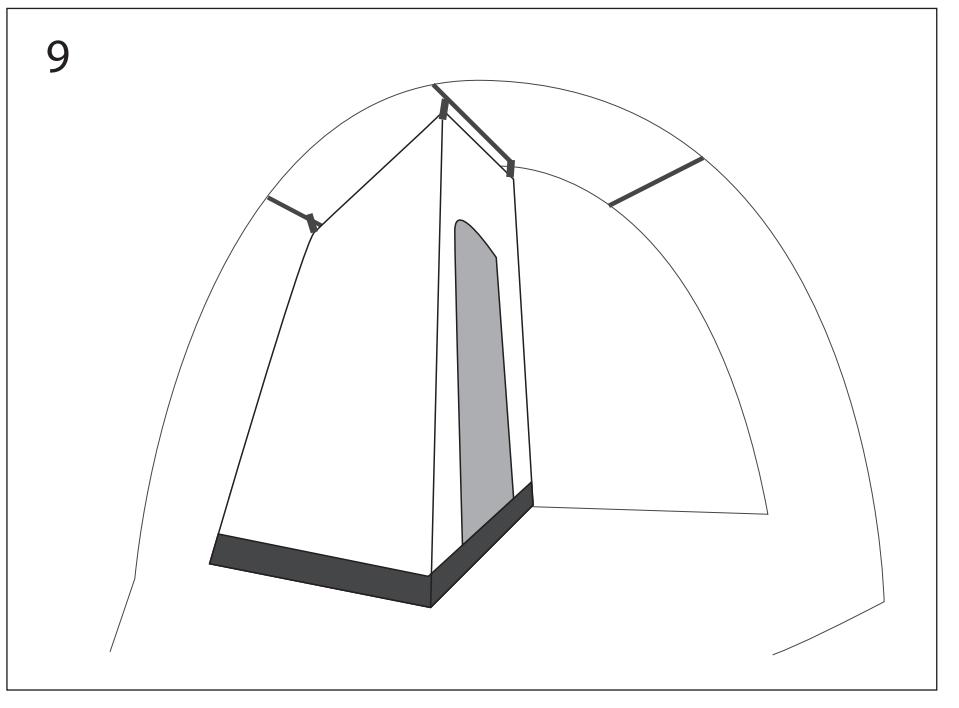

- Zelt nur bei geschlossenen Reißverschlüssen anspannen!
- Always close tent zippers before tightening the guy ropes!
- Avant de planter les piquets pour tendre et fixer la toile de tente, vérifier que tout les fermetures éclairées soient bien fermées.
- De tent altijd met gesloten ritssluitingen spannen
- Suljethan vetoketjut aina ennen lopullista kiristämistä!
- Stäng alltid dragkedjorna innan du spänner tält tyget!

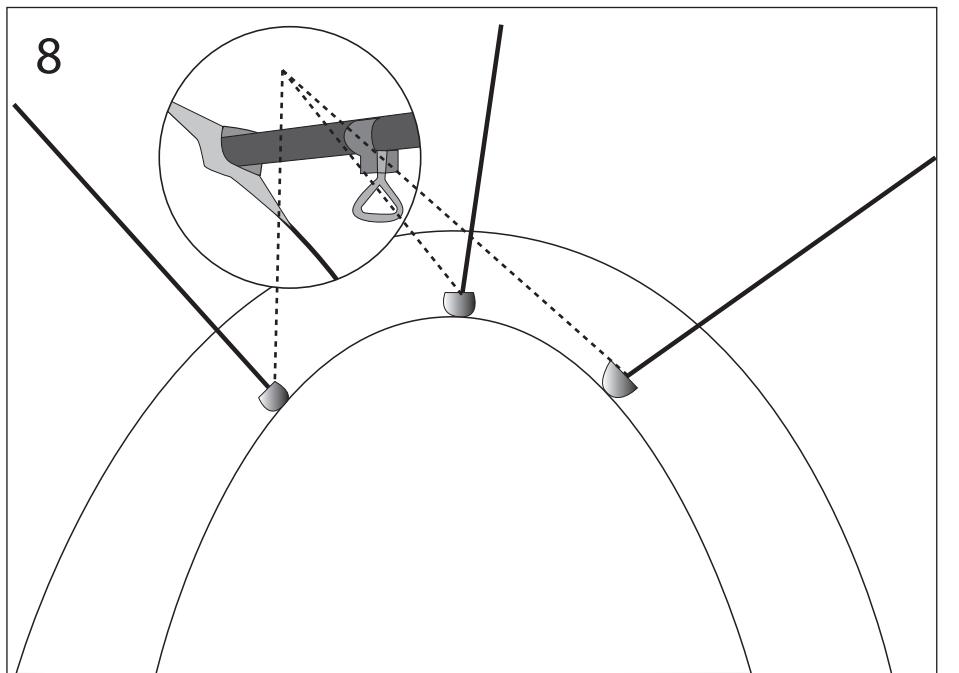