


VW GOLF MK.II

CARPETED REAR BOOT TRIM

CK5543

FITTING INSTRUCTIONS

You can see from the picture below that there are holes in the fibreboard to accept the plastic Trees. Line up the carpet to the centre of the car and push the Trees through the holes and locate the holes the body. This kit is designed to work in conjunction with our moulded carpeted wheel arches, hence the Velcro around the edges.

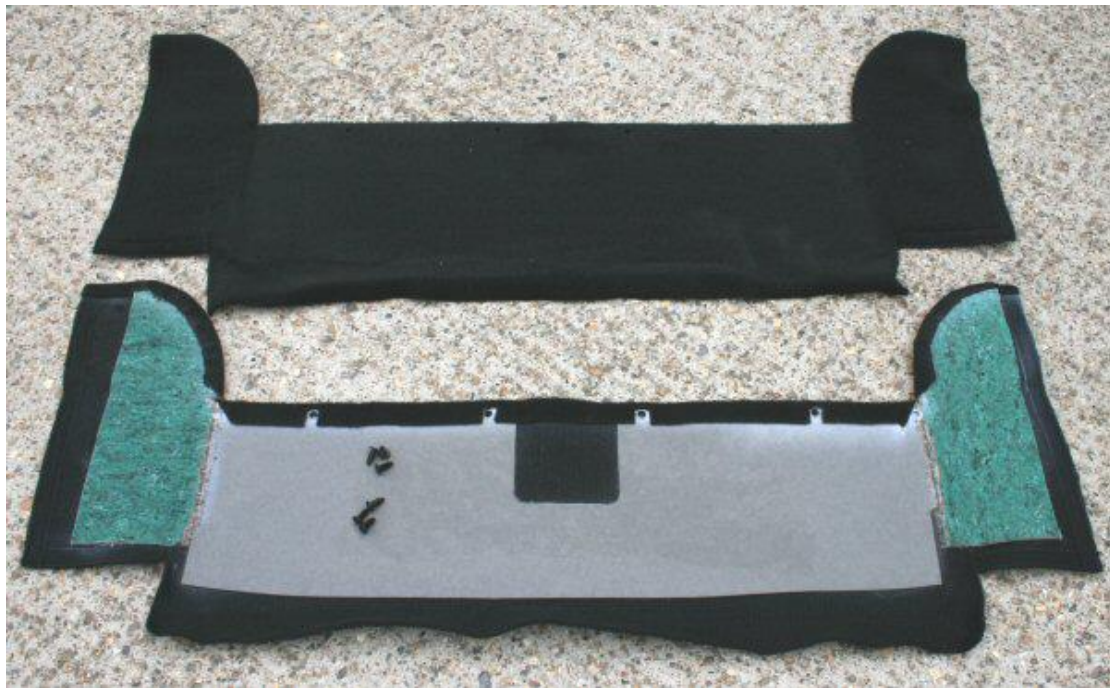

Where the carpet fits in the boot